

INSTALLATION INSTRUCTIONS

TPR Insulator



Install a Rheem®

1. Install TPR valve as per manufacturers instructions. TPR insulator must be installed on TPR valve prior to connecting any pipework.
2. Install insulator on TPR valve, taking care not to damage the insulator.
3. Ensure that both the lever and blowout cage are not impeded by the insulator.



INCLUDED IN THIS KIT:

090166 TPR INSULATOR



Rheem New Zealand Limited

475 Rosebank Road, Avondale 1026, PO Box 19011, Avondale, Auckland 1746.

Service Freephone 0800 657 335 – www.rheem.co.nz

All information is current at the time of publication (February 2025)

but may change without notice. 320760 Rev - A