



INSTALL A RHEEM

320589 A

Oct 2019

INSTALLATION INSTRUCTIONS

RHEEM GAS CONTINUOUS FLOW Security Bracket

The Rheem Gas Continuous Flow security bracket prevents access to the bolts that fix the water heater to the wall by locking the lower section of the water heater in place. The bracket is compatible for installation on all outdoor Rheem Gas Continuous Flow hot water heaters manufactured after the 1st January 2019. It is best to install this security bracket at the same time the water heater is being installed.

1. The gas fitter should determine the most suitable location for the Rheem Gas Continuous Flow water heater and secure in place with the upper supporting bracket.
2. Separate the front and rear security bracket parts by sliding them apart to disengage the tang features.
3. Fit the rear section of the security bracket (galvanised part) behind the lower water heater bracket with the central tang protruding through the central keyhole slot in the lower bracket. (Figure 2)
4. With the bracket in place mark the position for the fixing bolts.
5. Drill the fixing holes and secure both lower brackets with screws.
6. Connect the gas and water and commission the water heater.
7. With the security bracket front plate positioned **below** the unit and sitting outside of the rear bracket slide it up vertically so the tangs in the rear bracket engage into the loop features on the side of in the front plate.
8. Once the front plate is fully home and the top edge aligned with the top edge of the rear bracket using a screw driver or suitable blunt tang tool push through the lower slots in the front plate to bend the galvanised tangs inwards and lock the front plate in place.
9. Attach a suitable padlock (not provided) through the holes of the central tangs of the security brackets. (Figure 3)


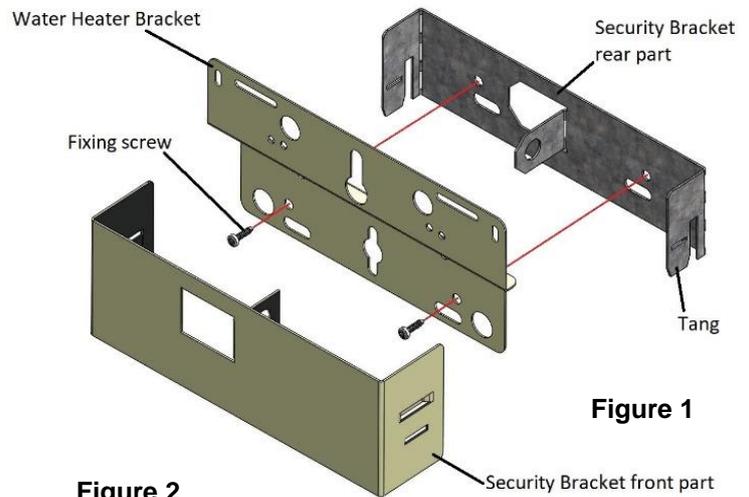


Figure 1

Figure 2



Figure 3

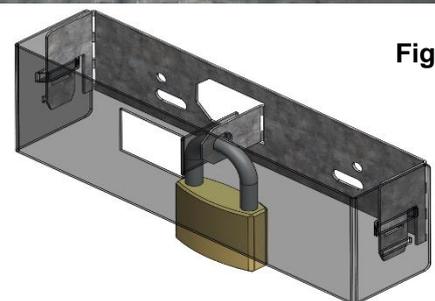

N.B Padlocks with a body wider than 30mm may not fit inside the body of the locking bracket



Max 30mm

RHEEM New Zealand
 475 Rosebank Road
 Avondale, Auckland 1026
www.rheem.co.nz

FOR WARRANTIES & SERVICE CONTACT
 Free phone: 0800 657 335
www.rheem.co.nz/support/manual-and-warranties/
www.rheem.co.nz/trade/warranty-claim/