

# **CONTINUOUS FLOW WATER HEATER** **PIPE COVER** **INSTALLATION INSTRUCTIONS**

**THESE INSTRUCTIONS ARE A GUIDE ONLY.  
ALL WORK IS TO COMPLY WITH AS/NZS 5601: GAS INSTALLATIONS,  
AND THE CURRENT VERSION OF THE NZ BUILDING CODE.**

***Read through all instructions before start of work***

1. Ensure all supplied kit components are on hand;  
1x pipe cover including lid and 4x screws (for attaching the lid to the pipe cover).
2. Ensure the electrical cabling, controller cabling, gas, cold water supply and hot water outlet pipes have been run and connected. Refer to the owners guide and installation instructions provided with the Continuous Flow Water Heater.
3. Install the pipe cover body immediately below the bottom of the water heater, mounting screws not provided.
4. Install the pipe cover lid to the pipe cover body using the 4x supplied screws.
5. Supply this manual and the Continuous Flow Water Heater Owners Guide and Installation Instructions to the Owner or Owners representative.

## **SIX MONTHLY PIPE COVER MAINTENANCE INSTRUCTIONS:**

Regular care and maintenance of your pipe cover and water heater is required.

1. Refer to the water heater owners manual for maintenance requirements and instructions of your water heater.
2. Every six (6) months wash the outside surfaces of your pipe cover with warm mild soapy water on a soft cloth.

Warning: Take extreme care not to get any liquid near the electrical connections. Do not use abrasive or corrosive cleaners or powders. Do not use any form of pressurised water such as a hose or water blaster.

If required the area around the pipe cover can be sprayed with insecticide to rid the area of insects. Do not spray the surface of or into the air inlet or outlet of the water heater unit.

3. For warranty terms, refer to the warranty section of your water heater owners guide. The pipe cover is considered to be a part of the water heater with regards to warranty.

## **CONTINUOUS FLOW WATER HEATER AND INSTALLER DETAILS;** (To be filled in by the installer)

MODEL: \_\_\_\_\_ SERIAL: \_\_\_\_\_

INSTALLER: \_\_\_\_\_

INSTALLER CONTACT DETAILS: \_\_\_\_\_

**THIS MANUAL TO BE LEFT WITH THE OWNER OR OWNERS REPRESENTATIVE**