

RHEEM TANKPAK

Single Unit - Tankpak 1 (Concept)




TANKPAK 1 MODEL		INTERNAL TPI01 EXTERNAL TPE01
Thermal Input	MJ/h	205
Recovery Rate at 50°C rise	L/hr	825
1st Hour Capacity (325L)	Litres	1150
1st Hour Capacity (410L)	Litres	1230
Mounting Options		Wall
Storage Tanks		1x610340 1x610430
Electrical Supply (240V/50Hz)	Amps	0.75 per CFWH
Pump Start Current	Amps	1.0 per Pump
Electrical Connection		1.8m 10A Plug & Lead per CFWH 1.8m 10A Plug & Lead per Pump C Controller
PHWF & PHWR Pipe Size	mm	25
Weight Empty (incl. Tank, CFWH & Controller)	kg	150
Delivery Temperature	°C	Up to 82

CFWH Dimensions



RHEEM COMMERCIAL CFWH	EXTERNAL MODEL	INTERNAL MODEL
Height	mm 600	mm 650
Width	mm 350	mm 350
Depth	mm 225	mm 250

Storage Tank Dimensions

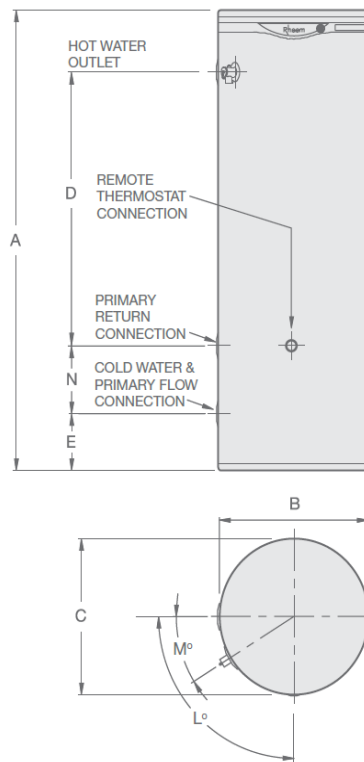

610 Series

MODEL NUMBER		610 340	610 430
		Vitreous Enamel	
Storage capacity	Litres	325	410
Dimensions	A	mm 1640	mm 1840
	B	mm 640	mm 685
	C	mm 640	mm 685
	D	mm 1008	mm 1210
	E	mm 115	mm 108
	F	mm -	mm -
	G	mm -	mm -
	H	mm -	mm -
	J	mm 290	mm 273
	K	degrees -	degrees -
	L	degrees 90°	degrees 84°
	M	degrees 32°	degrees 30°
	N	mm 290	mm 273
Weight Empty	kg	96	117

TANKPAK Settings

PRODUCT	SET POINT	DIFFERENTIAL
CFWH	70°C	-
Controller	65°C	3
Pump Speed	3	-

All information is current at time of publication (January 2019) but may change without notice.

RHEEM TANKPAK

Single Unit - Tankpak 1 (Concept)




Rheem Tankpak 1 comes with a single continuous flow water heater (CFWH), a storage tank, a pump and a controller.


The Tankpak 1 units are available in indoor (TPI01) and outdoor (TPE01) models with natural gas or ULPG. All models must be mounted on a vertical wall (frame not supplied).

TYPICAL INSTALLATION

WALL MOUNT - FRONT VIEW

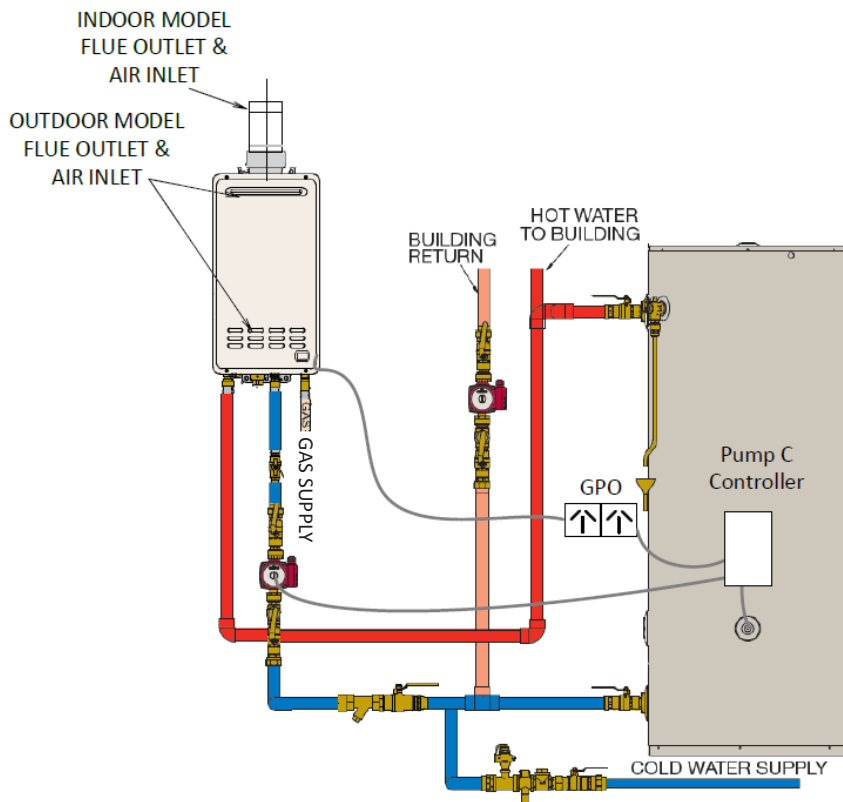

WALL MOUNT - SIDE VIEW

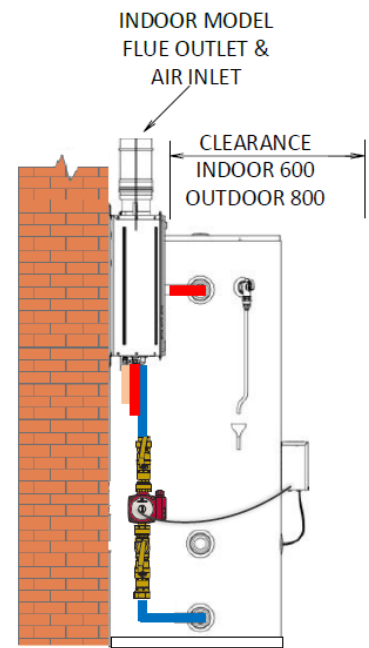

Tankpak 1 models are supplied with pump and controller separately

COMPONENTS

CFWH	Storage Tank	Pump	Controller
Internal Model - 862627*FZ	325L 61034050 or	UPS32-80N	PUMP/C Controller 6060262 - 4
External Model - 872627*FZ	410L - 61043050	(56959091UN)	

Flue components are available and must be installed for indoor installations. Please contact Rheem or refer either to the 'Owner's Guide and Installation Instructions' or 'Internal Fact Sheet' available at www.rheem.co.nz

*N = Natural Gas or
P = ULPG